

MAINTENANCE bolts, screws and knobs at least every four (4) months or as needed.

Motorised Relaxer POWER / POWERS


S S Ш

 \Box

ഗ


— О


ഗ

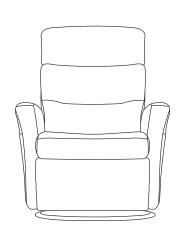


IMPORTANT

More information about your product in the Care Manual

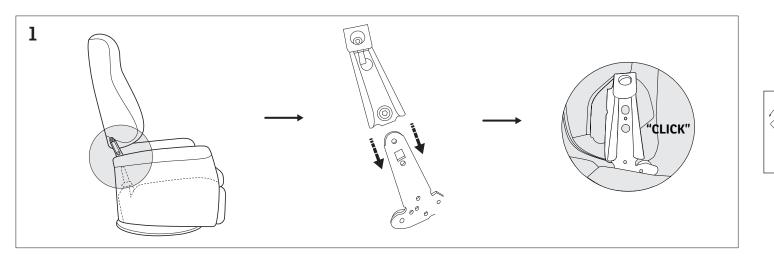

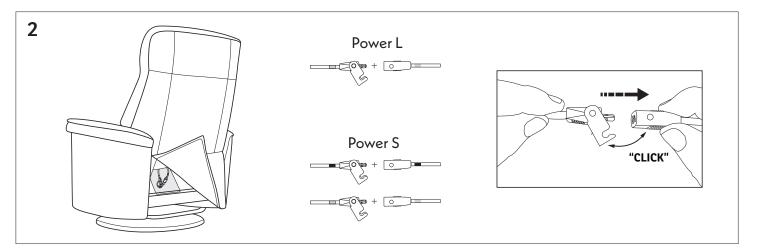

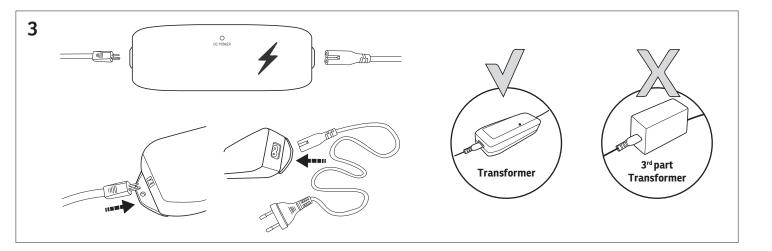

Relaxer Power function

