


MAINTENANCE bolts, screws and knobs at least every four (4) months or as needed.

ASSEMBLY INSTRUCTIONS


Motorised Lift POWER LIFT[®]

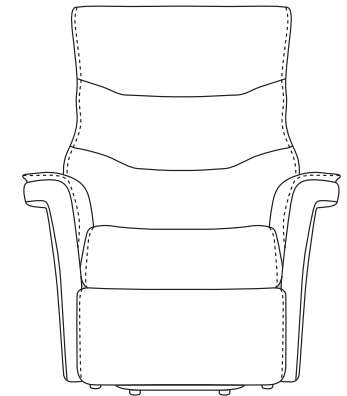


IMPORTANT

More information about your product in the Care Manual



1

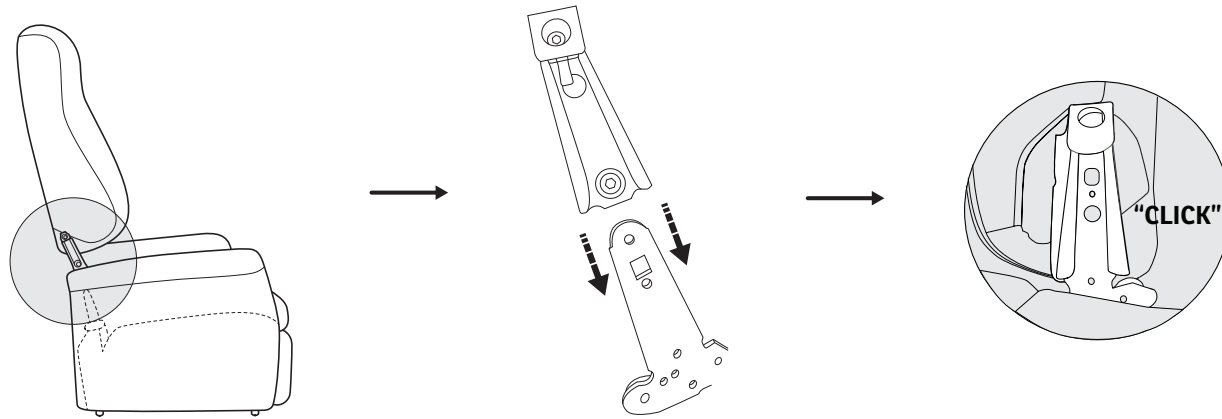

Lift Power function

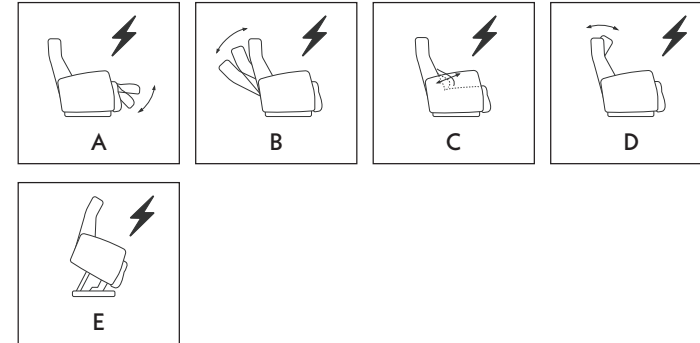

2

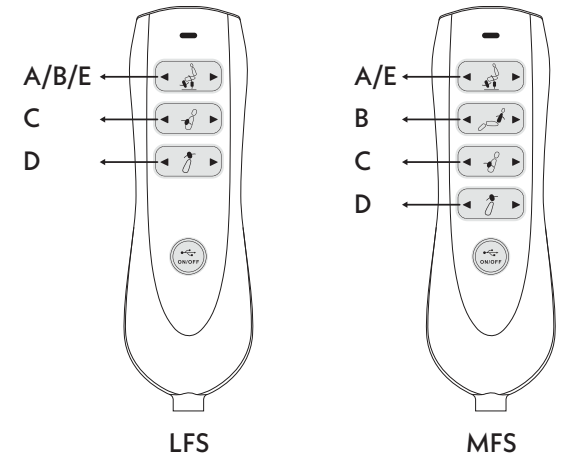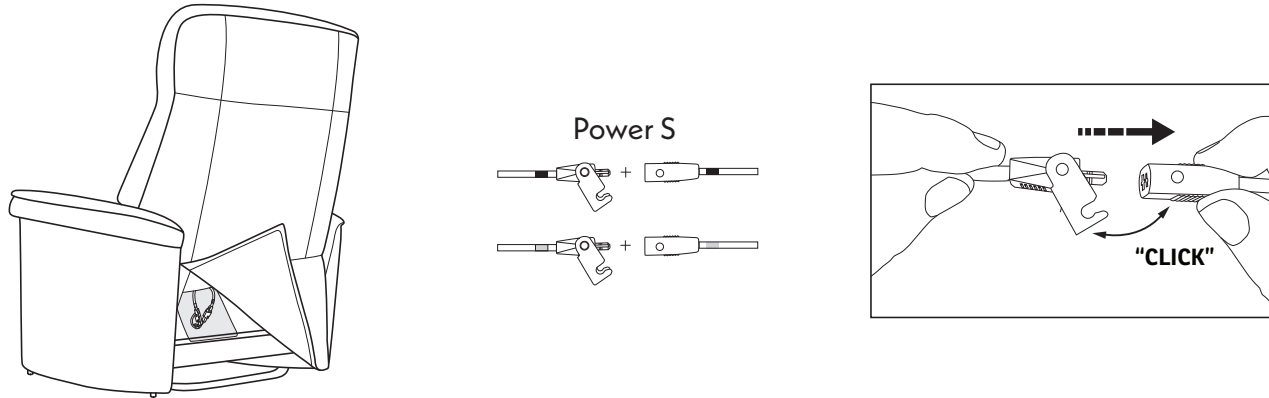

3

